



1 Introduction

The Adaptec AHA[®]-2940*Ultra* and AHA-2940*Ultra* Wide PCI-to-Fast SCSI host adapters provide a powerful multitasking interface between your computer's PCI bus and SCSI devices (disk drives, CD-ROM drives, scanners, tape backups, removable media drives, etc.). Collectively, both host adapters are referred to as the AHA-2940*Ultra* / 2940*Ultra* Wide. The following figures show the major components on the AHA-2940*Ultra* and AHA-2940*Ultra* Wide.

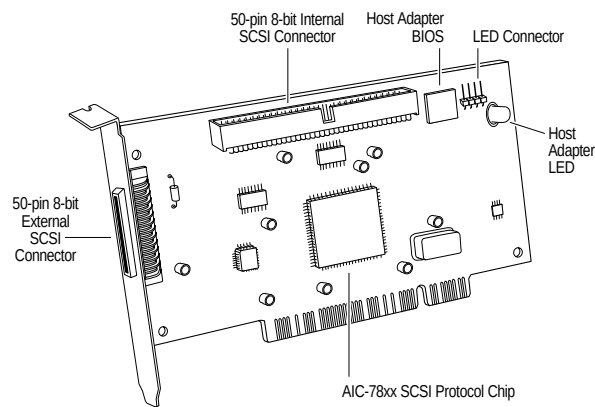

Adaptec AHA-2940*Ultra*

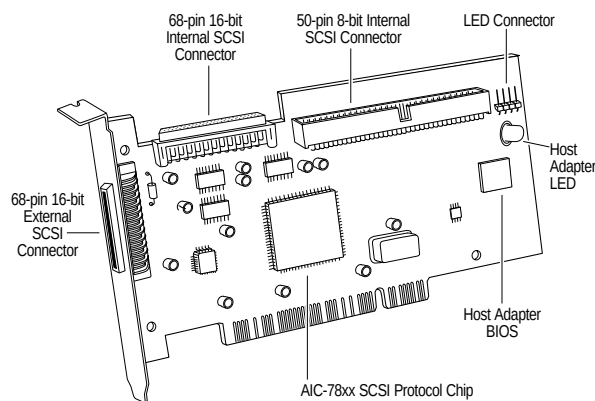

Adaptec AHA-2940*Ultra* Wide

2 Installing the Host Adapter

Follow these instructions to install the host adapter:

- 1** Turn OFF power to the computer and peripheral devices and disconnect the power cords.
- 2** Remove the cover from the computer case.
- 3** Locate an unused 32-bit PCI expansion slot (the slot must support Bus Master data transfers); unscrew and remove the metal bracket that covers the card-slot opening. (Save the screw to use when securing the host adapter in your computer.)

PCI slots are shorter than ISA or EISA slots and are typically white. One of these may be a shared slot into which you can insert either an ISA /EISA board or a PCI board.

- 4** Insert the host adapter in the PCI expansion slot. Press it down firmly so that the contacts are securely seated in the slot.
- 5** When the host adapter is firmly seated in the expansion slot, secure the metal bracket of the host adapter with the screw you removed in step 3.

Do not replace the computer cover or reconnect your computer and peripherals to their power sources yet!

3 SCSI Configuration Guidelines

Before installing your SCSI devices, you should understand the basic SCSI concepts described in this section. The information will help you set up your host adapter and devices so they function properly.

SCSI ID Numbers

Each device attached to the host adapter, as well as the host adapter itself, must have a unique SCSI ID number (0 to 7 for the AHA-2940*Ultra*, and 0 to 15 for the AHA-2940*Ultra Wide*).

We recommend that you leave the host adapter set to its default setting of SCSI ID 7. If you need to change the host adapter SCSI ID, see *Configuring the Host Adapter* on page 7. To change the SCSI ID on

your hard disk and other SCSI devices, refer to the device's documentation.

The host adapter supports the SCSI Configured AutoMatically (SCAM) protocol, which assigns SCSI IDs dynamically and resolves SCSI ID conflicts automatically at bootup. If your system includes SCSI disk drives or other devices that support SCAM, you do not need to manually assign SCSI IDs to these devices. To enable SCAM support, see *Configuring the Host Adapter* on page 7.

Most SCSI devices currently in use, however, do not support SCAM. The SCSI IDs on these devices must be set manually. To change the SCSI IDs on these devices, refer to the device's documentation.



Note: If you plan to boot your computer from a SCSI device attached to the host adapter, set the Boot Target ID setting in the *SCSISelect* utility to correspond to the SCSI ID of the device you are booting from (see *Configuring the Host Adapter* on page 7).

SCSI Terminators

To ensure reliable communication, the SCSI bus must be properly terminated. Termination is controlled by a set of electrical resistors, called *terminators*. Terminators must be placed (or enabled) at the two extreme ends of the SCSI bus. All devices that lie between the ends must have their terminators removed (or disabled).

Terminating the AHA-2940Ultra

Termination on the AHA-2940Ultra itself is controlled by software commands via the SCSISelect® utility. The default setting is *Automatic*, which works like this:

- If the AHA-2940Ultra detects that a cable is connected to either its internal or external SCSI connector, then it enables its terminators (the AHA-2940Ultra is at the end of the SCSI bus).

- If the AHA-2940Ultra detects that a cable is connected to both its internal and external SCSI connector, then it disables its terminators (the AHA-2940Ultra lies between the ends of the SCSI bus).

We recommend that you leave the AHA-2940Ultra set to its default setting of *Automatic*. If you want to manually enable or disable the AHA-2940Ultra termination setting, see *Configuring the Host Adapter* on page 7.

Terminating the AHA-2940Ultra Wide

Termination on the AHA-2940Ultra Wide itself is controlled by software commands via the SCSISelect utility. The default setting is set to *Automatic*.

We recommend that you leave the AHA-2940Ultra Wide set to its default setting of *Automatic*. If you want to manually set the AHA-2940Ultra Wide termination setting, see *Configuring the Host Adapter* on page 7. The following table lists the termination settings for manual configuration.

Devices Connected to AHA-2940Ultra Wide	AHA-2940Ultra Wide Termination	
	Low	High
68-pin internal connector only	ON	ON
68-pin external connector only	ON	ON
68-pin internal and 68-pin external connectors	OFF	OFF
50-pin internal connector only	ON	ON
50-pin and 68-pin internal connectors	OFF	ON
50-pin internal and 68-pin external connectors	OFF	ON

Terminating SCSI Devices

Read the device's documentation to determine how to enable or disable termination on your particular SCSI device(s). On most internal SCSI devices the termination setting is controlled by a jumper or a switch. On other internal SCSI devices you must physically remove or install resistor module(s). On most external SCSI devices, a terminating plug (a resistor pack embedded in a small plug) is installed or removed to control termination.

4 Installing SCSI Devices

You can connect up to a total of seven internal and external 8-bit SCSI devices to the AHA-2940*Ultra*, and up to 15 devices (seven 8-bit internal and eight Wide (16-bit) internal or external SCSI devices, or 15 Wide internal and external SCSI devices) to the AHA-2940*Ultra Wide*.



Note: You may only use two of the three connectors at any one time on the AHA-2940*Ultra Wide* host adapter.

Choosing SCSI Cables

The cables required to connect SCSI devices are determined by the type of devices you are installing, as described in the following table.

SCSI Device Type	AHA-2940 <i>Ultra</i>	AHA-2940 <i>Ultra Wide</i>
8-bit Internal SCSI	50-pin internal SCSI cable	50-pin internal SCSI cable
8-bit External SCSI	50-pin high-density external SCSI cable	—
16-bit Internal Wide SCSI	—	68-pin internal SCSI cable
16-bit External Wide SCSI	—	68-pin external SCSI cable

If you purchased your AHA-2940*Ultra* / 2940*Ultra Wide* in an Adaptec kit, the kit includes an internal SCSI cable that allows you to connect up to two internal SCSI devices (the AHA-2940*Ultra* kit includes a 50-pin internal SCSI cable, and the AHA-2940*Ultra Wide* kit includes both a 50-pin and a 68-pin internal SCSI cable). If you are connecting more than two internal SCSI devices, you must obtain an internal SCSI cable with enough connectors to accommodate all of your devices.

Adaptec sells high-quality internal and external SCSI cables. If your reseller does not stock these cables, you can order them directly from Adaptec.

When Fast SCSI devices are connected to the host adapter, the total length of all cables (internal and

external) must not exceed 3 meters (9.8 ft.) to ensure reliable operation. If no Fast SCSI devices are connected, the total length of all cables must not exceed 6 meters (19.7 ft). See your device's documentation to determine if it is a Fast SCSI device.

Connecting Internal SCSI Devices

If you are connecting internal SCSI devices, make sure you have an internal SCSI cable with enough connectors to accommodate all of your devices.

- 1** Prepare each SCSI device for installation; configure the device SCSI ID and terminators (terminate the last internal device attached to the cable). For instructions, see the device's documentation as well as *SCSI Configuration Guidelines* on page 2.
- 2** Install the SCSI device in your computer. Refer to your computer and device documentation for instructions.
- 3** Plug the connector at one end of the internal SCSI cable into the host adapter's internal SCSI connector.

Make sure the colored stripe on one side of the cable is aligned with pin-1 of the host adapter's connector. Pin-1 of the connector is usually designated by a small triangle (▲), or a "1" on the connector.

- 4** Plug the remaining connectors on the cable into the connectors on the backs of the devices.

Make sure the colored stripe on the cable is aligned with pin-1 of the device's connector.

- 5** Connect a DC power cable (from your computer's power supply) to the power connector on the SCSI device.

Connecting External SCSI Devices

If you are connecting external SCSI devices to your host adapter, you must obtain an external SCSI cable for each external device you install.

- 1 Prepare each SCSI device for installation; configure the SCSI ID and attach a terminating plug into the last external device. For instructions, see the device's documentation as well as *SCSI Configuration Guidelines* on page 2.
- 2 Plug the connector at one end of the external SCSI cable into the host adapter's external SCSI connector.
- 3 Plug the connector at the other end of the cable to either one of the SCSI connectors on the external SCSI device.
- 4 To connect other external SCSI devices, daisy-chain each device to the previous device until all external SCSI devices have been connected.

5 Using the LED Connector

(Optional) Most computers have an LED disk activity light on the front panel. If you disconnect the cable from the LED connector on the motherboard and connect it to the LED connector on the host adapter, the LED on the front panel of the computer will light whenever there is activity on the SCSI bus.

6 Reassembling the Computer

Be sure all power switches are OFF, then replace the computer chassis cover and reconnect the power cables to your computer and peripherals. Before turning on your computer and peripherals, review the following section, *Configuring the Host Adapter*. It may be necessary to configure the host adapter.

7 Configuring the Host Adapter

The AHA-2940*Ultra* / 2940*Ultra* Wide includes the onboard, menu-driven SCSI*Select* configuration utility, which allows you to change host adapter settings without opening the computer or handling the

board. *SCSISelect* also contains SCSI disk utilities that let you low-level format or verify the disk media of your SCSI hard disk drives.

SCSISelect Default Settings

The AHA-2940*Ultra* / 2940*Ultra* Wide has the default settings shown in the table on the following page. The default settings are appropriate for most PCI systems. If you do not need to change any of the default settings, there is no need to run *SCSISelect*. Your host adapter is ready for operation and you can proceed to *Installing Device Drivers* on page 10.

For situations where you might want or need to change the settings, see the descriptions of each setting in the user's guide. If you need to change any of the default settings, or if you would like to format or verify a disk, see *Starting the SCSISelect Utility* on page 9 to start the utility.

SCSI Bus Interface Definitions	Default
Host Adapter SCSI ID	7
SCSI Parity Checking	Enabled
Host Adapter SCSI Termination	Automatic
Boot Device Options	Default
Boot SCSI ID	0
Boot LUN Number ¹	0
SCSI Device Configuration	Default
Maximum Sync Transfer Rate	20.0 MBytes/sec ² 40.0 MBytes/sec ³
Enable Disconnection	Yes (Enabled)
Initiate Wide Negotiation ³	Yes (Enabled)
Send Start Unit Command ⁴	Yes (Enabled)
Enable Write Back Cache	N/C (No change)
BIOS Multiple LUN Support ⁴	No (Disabled)
Include in BIOS Scan	Yes (Enabled)
Advanced Configuration Options	Default
Plug and Play SCAM Support	Disabled
Reset SCSI Bus at IC Initialization	Enabled
Extended BIOS Translation for DOS Drives > 1 GByte	Enabled
Verbose/Silent Mode	Verbose
Host Adapter BIOS (Configuration Utility reserves BIOS space)	Enabled

Support Removable Disks Under BIOS as Fixed Disks ⁴	Boot only
Display <Ctrl-A> Message During BIOS Initialization ⁴	Enabled
BIOS Support for Bootable CD-ROMs ⁴	Enabled
BIOS Support for Int13 Extensions ⁴	Enabled

¹ Setting is valid only if Multiple LUN Support is enabled

² For AHA-2940 *Ultra* only

³ For AHA-2940 *Ultra Wide* only

⁴ Settings are valid only if host adapter BIOS is enabled

Starting the SCSISelect Utility

You can start the SCSISelect utility by pressing **Ctrl-A** when the following prompt appears at boot time:

Press <Ctrl><A> for SCSISelect (TM) Utility!

The first menu that appears displays the options Configure / View Host Adapter Settings and SCSI Disk Utilities.

Using SCSISelect Menus

SCSISelect uses menus to list options you can select. To select an option, use the ↑ and ↓ keys to move the cursor to the option, then press **Enter**.

In some cases, selecting an option displays another menu. You can return to the previous menu at any time by pressing **Esc**. To restore the original SCSISelect default values, press **F6**. To toggle the display between color and monochrome modes, press **F5** (this feature may not work on some kinds of monitors).

Exiting SCSISelect

To exit SCSISelect, press **Esc** until a message prompts you to exit (if you changed any AHA-2940 *Ultra* / 2940 *Ultra Wide* settings, you are prompted to save the changes before you exit). At the prompt, select **Yes** to exit, then press any key to reboot the computer. Any changes you made in SCSISelect take effect after the computer boots.

Using the SCSI Disk Utilities

To access the SCSI disk utilities, select the **SCSI Disk Utilities** option from the menu that appears after starting SCSISelect. Once the option is selected, SCSISelect

immediately scans the SCSI bus and displays a list of all SCSI IDs and the devices assigned to each ID.

When you select a specific ID and device, a small menu appears, displaying the options Format Disk and Verify Disk Media.

- **Format Disk**—This utility allows you to perform a low-level format on a hard disk drive. Most SCSI disk devices are preformatted at the factory and do not need to be formatted again. The Adaptec Format Disk utility is compatible with the vast majority of SCSI disk drives.
- **Verify Disk Media**—This utility allows you to scan the media of a hard disk drive for defects. If the utility finds bad blocks on the media, it prompts you to reassign them; if you select yes, those blocks are no longer used. You can press **Esc** at any time to abort the utility.

8 Installing Device Drivers

Some operating systems embed (include) the AHA-2940*Ultra* / 2940*Ultra* Wide device driver as part of their installation software. These drivers work fine with your AHA-2940*Ultra* / 2940*Ultra* Wide; however, the most recent version of the driver should be installed in order for your AHA-2940*Ultra* / 2940*Ultra* Wide to perform at its optimum level.

If you purchased your AHA-2940*Ultra* / 2940*Ultra* Wide in a kit, the kit includes the latest Adaptec EZ-SCSI[®] and Adaptec 7800 Family Manager Set software.

- **Adaptec EZ-SCSI**—allows you to install software drivers for DOS, Windows[®] 3.x, and Windows[®] 95/98 and includes several additional utilities. Refer to the EZ-SCSI documentation for more information.

- **Adaptec 7800 Family Manager Set**—allows you to install software drivers for NetWare, OS/2, Windows 95/98, Windows NT™, and UNIX. Refer to the *7800 Family Manager Set User's Guide*.

Contact Adaptec if you need to order EZ-SCSI or the 7800 Family Manager Set.

9 Troubleshooting Checklist

If you have a problem during installation, check these items first:

- Have you installed the host adapter into a PCI Rev 2.0 compliant computer?
- Are all SCSI devices powered?
- Are all SCSI bus cables and power cables properly connected? Is pin 1 oriented correctly?
- Does the host adapter and all devices on the SCSI bus have unique SCSI IDs?
- Are all devices on the SCSI bus terminated properly?
- Does your system CMOS setup require you to enable PCI bus parameters? If so, see your computer's documentation. Check that IRQ channel assignment, board, and BIOS settings have been made.
- Did you install your host adapter in a bus master PCI slot? Refer to your computer's documentation or try another slot.

Computer Will Not Boot from a SCSI Disk Drive

If both SCSI and non-SCSI disk drives are installed, then the non-SCSI disk drive will be the default boot device. Most newer systems allow for booting from SCSI devices. Check your system manual for instructions on how to set SCSI as the default boot device. If the system has only SCSI disk drives, do the following:

- 1 Make sure the drive type in your computer's CMOS setup is set to **No Drives Installed**.

- 2 Make sure the boot hard disk SCSI ID corresponds to the Boot Target ID setting in *SCSISelect* (see page 8). The SCSI ID is normally set with jumpers or switches on the drive.
- 3 If this does not solve the problem, *back up all data* on the SCSI hard disk and perform a low-level format with the *SCSISelect* Format Disk option. See the MS-DOS documentation for instructions on partitioning the disk after formatting.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Move the equipment away from the receiver
- Plug the equipment into an outlet on a circuit different from that to which the receiver is powered
- If necessary, the user should consult the dealer or an experienced radio / television technician for additional suggestions

CAUTION: Only equipment certified to comply with Class B (computer input / output devices, terminals, printers, etc.) should be attached to this equipment, and must have shielded interface cables.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the user's authority to operate such equipment.

Each host adapter is equipped with an FCC compliance label which shows only the FCC Identification number. The full text of the associated label follows:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Adaptec, Inc.

691 South Milpitas Blvd.
Milpitas, CA 95035


© 1999, Adaptec, Inc. All rights reserved. Adaptec, the Adaptec logo, AHA, EZ-SCSI, and SCSI*Select* are trademarks of Adaptec, Inc. which may be registered in some jurisdictions. Windows NT is a trademark, and Windows and Windows 95/98 are registered trademarks, of Microsoft Corporation in the U.S. and other countries used under license. All other trademarks are owned by their respective owners.

Printed in Singapore

Stock No.: 512306-00, Rev. A RAC 4/99

Information subject to change without notice.

Installation Guide

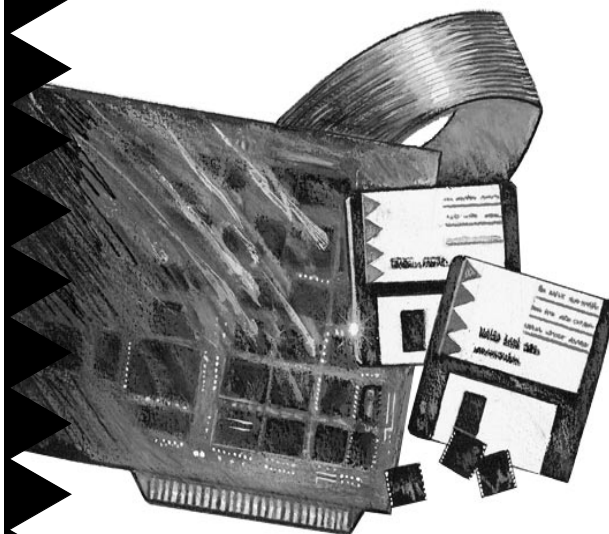

AHA-2940*Ultra* / 2940*Ultra* Wide

PCI-to-*Ultra*SCSI Host Adapter
with SCSI*Select* / Edition 2.20

 adaptec®